



Parent monitor

#### Wireless camera

(Models PNM402 and PNM502 come with 2 wireless cameras)

#### The accessories:

(2) 10-foot charging cables (2) power adapters *Note:* The models PNM402 and PNM502 come with 3 charging cables and 3 power adapters.

# Check out our setup videos

 
On your computer, go to ProjectNursery.com/Electronics or scan the QR code here.



# 2 Charge the monitor



Plug one end of this cable into the USB CHARGING iack on the side of the parent monitor.



Plug the other end of the charging cable into one of the included charging adapters. Then plug the adapter into an outlet or surge protector.

Find one of the charging


cables included in this

package.

# **3** Position the camera(s)

 Find a location for the camera(s) that gives you the best view of your baby in his or her crib.





Place the camera(s) on a flat surface, like a dresser or shelf, or mount the camera to a wall using the keyhole slots on its bottom.

**IMPORTANT:** NEVER place the camera(s) or cords of any kind inside the crib. NEVER place the camera(s) or cords within reach of the baby. They should be at least 3 feet away.



#### 

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.



package.

# 4 Plug in the camera(s)

Find the other charging cable(s) included in this

Plug one end into the **DC** In jack on the back of the camera(s).



Plug the other end into the single charging adapter. Then plug the adapter into an outlet or surge protector.

The camera turns on automatically when it's plugged in (the indicator light on the base below the camera lens turns blue).

# Turn on the monitor



5

 
Press and hold the **POWER** button on the parent monitor to turn it on.

## **Congratulations!**

Your system is ready to use! The camera(s) comes prepaired with your parent monitor. However, it's a good idea to go ahead and set the time on your parent monitor now, before you start using it.

For information on how to use your new system, see the owner's manual or the other side of this guick start guide.

# 6 Set the date and time on the parent monitor



- Press the **MENU** button on the parent monitor. The menu appears on screen.
- ▲ Use the up/down arrow buttons to set the month, day, and year.



5 After setting the year, press the right arrow to adjust the time.


Use the up/down arrows to set the hours, minutes, and AM/PM. Press OK/ZOOM when vou're finished.

Use the arrows  $\rightarrow$  to highlight SETTINGS. Press o 💿 💿 💿 **OK/ZOOM** to select 🛛 💿 🕟 🔕 ок it. The Settings menu appears on project nursery



screen. Press the down arrow to highlight Time Set. Press OK/ **ZOOM** to select it.

# Tour of System: Parent Monitor

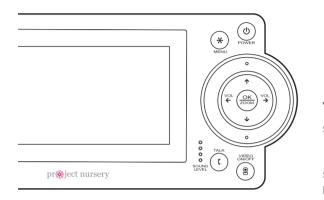

## Watching baby

You can turn the display on and off without turning the monitor off. You'll still hear your baby, but the display will be asleep until you awaken it.

To turn the display on or off: Press the VIDEO **ON/OFF** button on the parent monitor.

#### Want more info on the system

See the user's manual or visit www.ProjectNursery.com.

(\*) accesses the system's menu screens. See the user's manual for more information.



 $\leftarrow$  and  $\rightarrow$  turn the volume down/up. In menu screens, these navigate left/right.

 $\left(\frac{OK}{200M}\right)$  zooms the camera in/out. Press and hold to start pan/tilt of the camera, then use the arrows to pan and tilt.


 $\uparrow$  and  $\downarrow$  navigate up/down in menu screens.

SOUND LEVEL indicators show you the level of sound from your baby's room.

( lets you talk through the camera's speaker. Press and hold while talking.



(a) turns the screen on and off. Press and hold to switch cameras if you have more than one paired to this monitor.

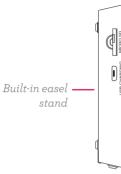

## Parent monitor side and back panels

MICRO SD slot holds a memory card (not included) for video or still image recording. See the User Guide for information on making videos or taking pictures of your baby.

**USB CHARGING jack** plugs into your charging cable to recharge or power the parent monitor.

Built-in easel stand lets you stand the unit on a flat surface.

### Pan, Tilt, and Zoom

To zoom the active camera: Press the **OK/ZOOM** button on the parent monitor.

To pan or tilt the active camera: Press and hold the **OK/ZOOM** button until the pan/tilt arrows appear on the screen. Then use the arrow buttons to pan and tilt the camera.

# Talking to baby

To talk through the speaker on the active camera: Press and hold the **TALK** button on the parent monitor.

Talk normally to the parent monitor while you're pressing the **TALK** button—your voice will come out on the camera's speaker.

Release the **TALK** button when you're done talking.

#### **Ouestions?**

Just call 1-844-393-7338 or visit ProjectNursery.com

#### Listening to baby

The **SOUND LEVEL** indicators on the parent monitor show you at a glance the sound level in your baby's room, regardless of how loud the audio is on the parent monitor.

To increase or decrease the volume of the audio monitor: Press the **VOL+** or **VOL-** buttons on the parent monitor.

> ©2016 Voxx Accessories Corp. 3502 Woodview Trace, Suite 220 Indianapolis, IN 46268

> > PNM4-501-2 QSG 01

# Jp and Runnina In Just a Lew Baby Steps...