



# YAMAHA®

## YSP5600 Reset Procedure



Put unit into 'Advanced Mode'.

Press the 'POWER' key to turn off the unit.

Hold down the 'INPUT' key on the top panel and turn on the unit with the remote.

'ADVANCED' will be shown on the units display.

Release the 'INPUT' key on the top panel, then use the 'UP / DOWN' buttons on the remote to cycle through to 'INIT'.

To reset all settings not related to network functionality, choose '**INFO**'.

To rest all network settings, choose '**NET INFO**'.

Power off the unit to ensure the unit is reset.