

Opener Cover Replacement Instructions

⚠ WARNING

BE SURE ELECTRICAL POWER HAS BEEN DISCONNECTED FROM THE INPUT POWER LINES PRIOR TO REMOVING ANY ELECTRICAL COMPONENT COVER.

⚠ WARNING

ANY AND ALL REPAIRS MADE TO THIS UNIT MUST BE PERFORMED WITH THE DOOR DISCONNECTED FROM THE UNIT AND IN THE CLOSED POSITION.

NOTE: Rail not shown, rail removal is not necessary for this repair.

These instructions are written assuming that you will have ample room around unit to perform this repair. Some rare instances will require removal of the unit from it's mounting hardware and repair made on a bench or floor. Refer to your owners manual and/or installation poster for proper assembly and/or programming and carefully read and understand all warnings and cautions pertaining to your unit. Manuals/instructions can be downloaded from our websites. Refer to your unit label for website information.

Parts Included in this kit: Motor cover assembly, 3 mounting screws.

Tools Required: 1/4" nut driver, small common screwdriver.

Approximate Time Required: 10 Minutes.

1. Remove power from operator.
2. Press down on tabs to remove lens. FIG-1
3. Using a 1/4" nut driver or common screw driver, remove the 3 opener cover screws and opener cover. FIG-2
4. Install replacement opener cover and included screws in reverse order.
5. Snap lens back into place.
6. Reapply power to operator.

