

This version of Halo headlamp can be wired in 3 different configurations.

- #1) Connect red wire to 12V ignition source for white halo ring as a Daytime Running Light (DRL)
- #2) Connect yellow wire to 12V ignition source for amber halo ring as a Daytime Running Light (DRL)
- #3) Connect red wire to 12V ignition source and Halo will function as a white Daytime Running Light. Then connect the yellow wire to the corresponding turn signal wire. When the turn signal is activated the corresponding Halo will change from white to amber and flash with turn signal.