



## FUSE BOX UNDER HOOD

- Inside edge of box (Blue) will need to be notched for the DRL power wire. This can be accomplished by using a drill bit about the same size as the wire. Doing this will allow for the lid of the fuse box to be closed without crimping the power wire.
- Power to DRL's can be obtained by using the M9 Fuse port (RR Heated Seat). This will allow the DRL's to turn on and off with the ignition. If you have heated seats there will be a fuse in this port. Simply use a fuse tap to make the connection, The Rogue DRL's draw nominal power (.25 amps) so power draw is minimal.