

wall flats™

FELT, MATTE + LUXE INSTALLATION INSTRUCTIONS

SIMPLE, MODERN, VERSATILE + GOOF-PROOF

TOOLS + SUPPLIES NEEDED

SURFACE PREP



PRIMER (SEMI-PERMANENT)

ADHESIVE



CONTACT CEMENT (PERMANENT)




TESA 4965 1/2" TAPE (SEMI-PERMANENT)

INSTALLATION



PRESSURE ROLLER

APPLY ADHESIVE




ROLLER/ BRUSH


OTHER TOOLS



UTILITY KNIFE




LEVEL



METAL RULER


CONTACT CEMENT OPTIONS - We recommend Dap Weldwood Low Odor Contact Cement or Wilsonart H2O Water-based Low VOC Nonflammable Contact Cement

1 PREPARATION

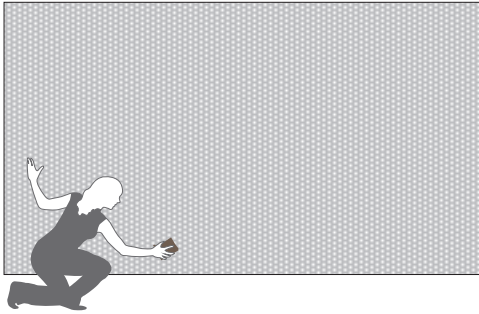

Made to install over a flat/smooth surface that is clean, dry and free of loose debris. If using the PSA tape for a semi-permanent install apply a strong bonding primer prior to adhering the panels. **Panels should acclimate for a minimum of 48 hours prior to installation.**


2 PLANNING

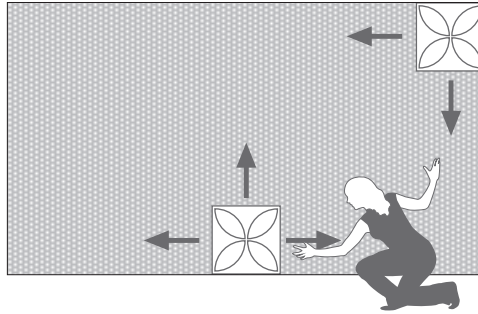

Will your install be wall-to-wall, a floating design, a strip of panels, etc? Plan before beginning and lay the panels out on the floor or sketch it out.


Use a level to mark straight lines on the wall. Allow cut panels to fall in more inconspicuous areas like corners and the bottom of a wall. If working from the center out, all panel edges may need to be cut. Plan your design well to ensure desired results are what you expect. **Remember, measure twice and cut once.**

3 SEMI-PERMANENT ADHESIVE

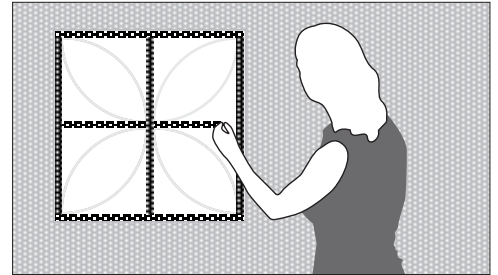


If choosing to install using Tesa 4965 1/2" Tape, apply the tape to the perimeter of each panel as well as 2 strips across the center. Each corner should be covered. Press firmly along each strip. Peel backing off and adhere to the surface.

3 PERMANENT ADHESIVE

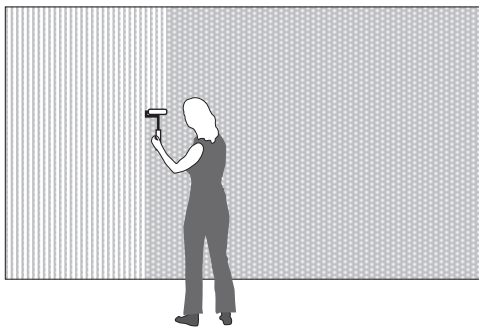

Installing with contact cement, follow manufacturer's recommendations on applying to both the wall and the panel and dry times prior to adhering to the wall. A second coat may be required.

4 INSTALLATION

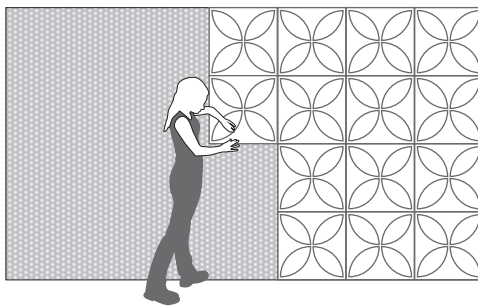


Use a **pressure roller**, around the perimeter of the panel and other touchpoints for optimal adhesion.

TIPS FOR CUTTING PANELS

Wall Flats can be cut with a utility knife or power tools blades, bits, etc... designed for finishing work. Follow manufacturer's suggestions for equipment use and safety.

5 ENJOY

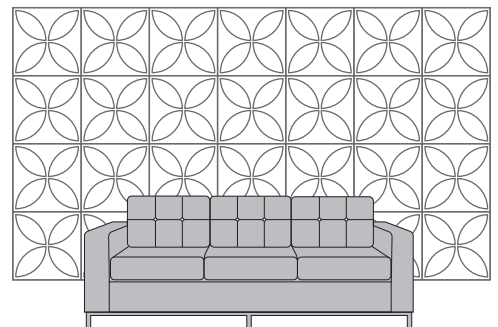

Now enjoy your transformed wall.

inhabit®

888-830-5072 inhabitliving.com info@inhabitliving.com

©2005 - 2019 Inhabit Inc. All rights reserved. The Inhabit® name, Wall Flats® and the designs are registered trademarks of Inhabit Inc. Please be aware that Inhabit® products and designs are protected registered copyrights, patents & pending patents. Duplication of designs, creation of derivative works or production of our methods of fabrication is a violation of the Inhabit® intellectual property rights and will be duly pursued. Wall Flats® are protected under US design copyrights: VA 1-777-851, VA 1-777-862, VA 1-777-878, VA 1-777-829, VA 1-777-855, VA 1-777-874, VA 1-777-905, VA 1-777-892, VA 1-069-159. Descriptive or typographical errors are subject to correction. Inhabit accepts no responsibility for misuse of this product.