

# SIGNATURE SERIES

by RONBOW

## INSTALLATION AND CARE GUIDE

FREE MARBLE FLOATING PLANE SINKTOP | TOWEL BAR

E020731-8-CW

E020747-8-CW

E028015


ADA

Model : E020731-8-CW  
E020747-8-CW  
E028015 towel bar

Designed By: DANELONMERONI | UK

## PRE-INSTALLATION

### Tools Required

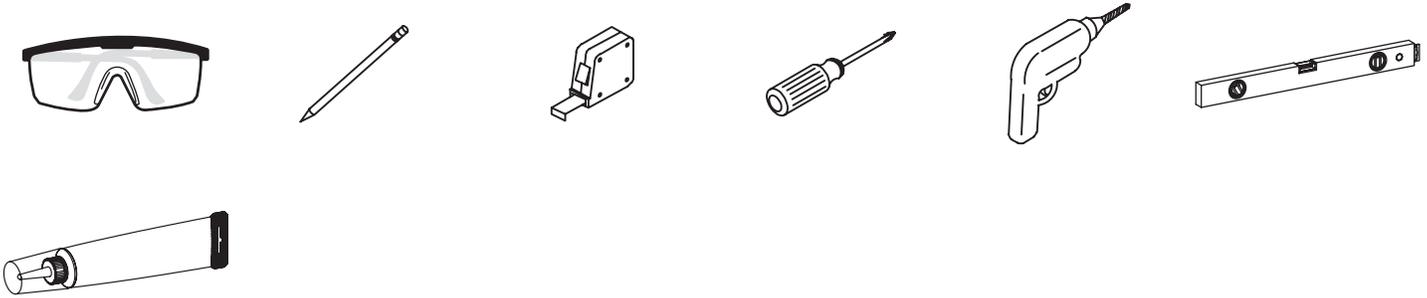

### Materials Included

E020731	E020747
8 long screws	12 long screws
2 wall brackets	3 wall brackets
4 rubber levelers	6 rubber levelers
4 leveling screws	6 leveling screws


### Materials Required

- 1 2x8 beam cut to size

## INSTALLING SUPPORT FOR THE VANITY

Install 2x8 backing material behind the finished wall to properly secure the vanity.

- To properly secure the vanity, the middle of the required 2x8 backing material must be 33-1/2" (85cm) from the finished floor.
- Extend the backing material beyond the width of the vanity to the nearest stud. This will ensure proper support for the vanity.
- Front-notch the studs to ensure the 2x8 backing material is flush against the studs.
- Secure the 2x8 backing material to the studs with framing nails.
- Rough-in the water supply and drain lines into the rough-in plumbing areas of the vanity.

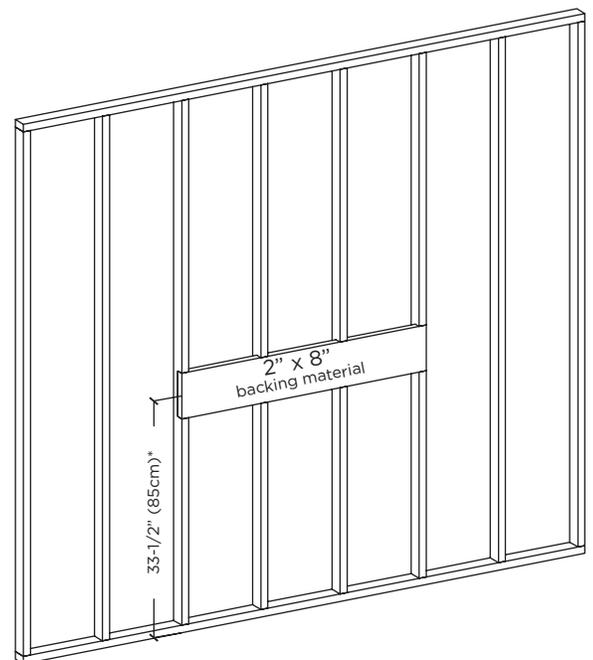

Model : E020731-8-CW  
E020747-8-CW  
E028015 towel bar

Designed By: DANELONMERONI | UK

## INSTALLATION

**Step 1:** Place the backsplash over the dry wall area where the 2x8 was installed. Verify the backsplash is level.

Draw the outline of the 2 openings where the wall bracket will be installed.


Each bracket will have 4 bolts.

**See Figure 1.**

**NOTE:** For the 47" model there will be 3 openings for the wall brackets.

**See Figure 2.**

**Figure 1.**

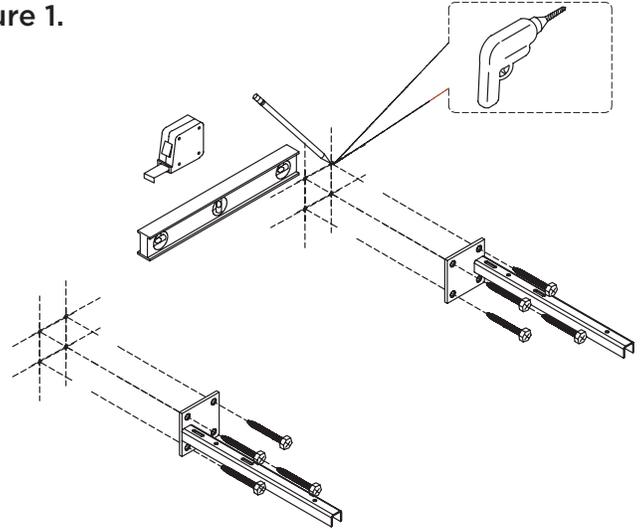

**Step 2:** Place the left wall bracket on the left outline and mark the location of the bolt openings.


Repeat for the wall bracket on the right.

**See Figure 1.**

**NOTE:** For the 47" model follow step 2 for each wall bracket.

**See Figure 2.**

**Figure 2.**

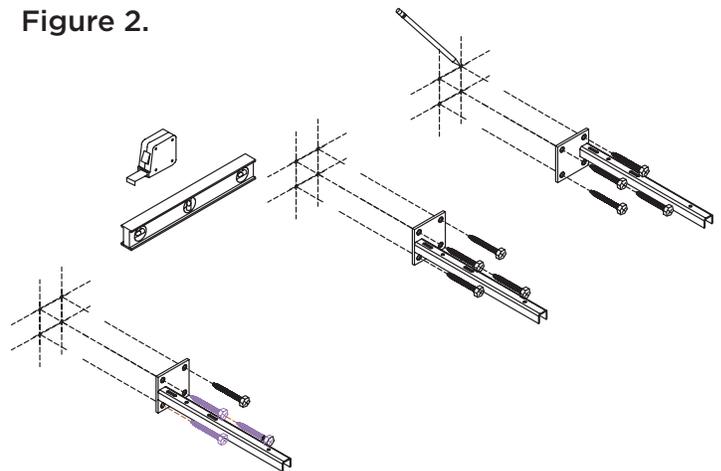

**Step 3:** Secure each wall bracket to the wall with the bolts provided.

**Model :** E020731-8-CW  
E020747-8-CW  
E028015 towel bar

Designed By: DANELONMERONI | UK

**Step 4:** Slide the backsplash over the wall brackets.

Verify the backsplash is level.

If adjustments are necessary, repeat steps 1 - 3.

**See Figure 3.**

**NOTE:** See Figure 4 if installing the 47" model.

**See Figure 4.**


**Step 5:** Minor adjustments are sometimes needed to level the stone.

Install two screws in each wall bracket. These will act as levelers.


Make adjustments from the bottom of the leveler using a screwdriver, then verify the top is level.

**See Figure 5.**


**Figure 3.**

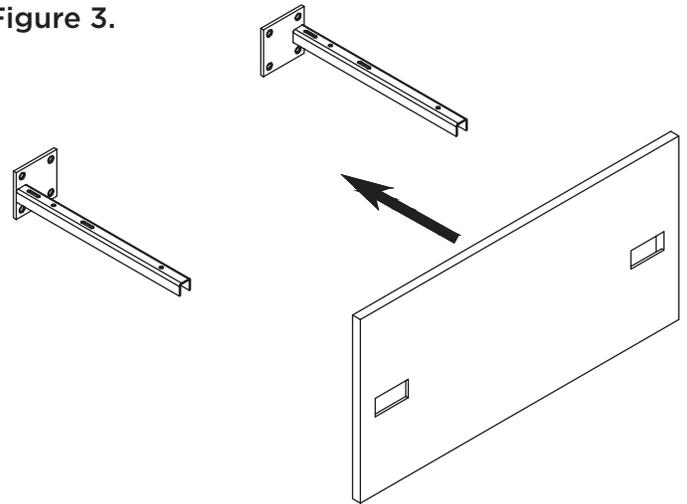

**Figure 4.**

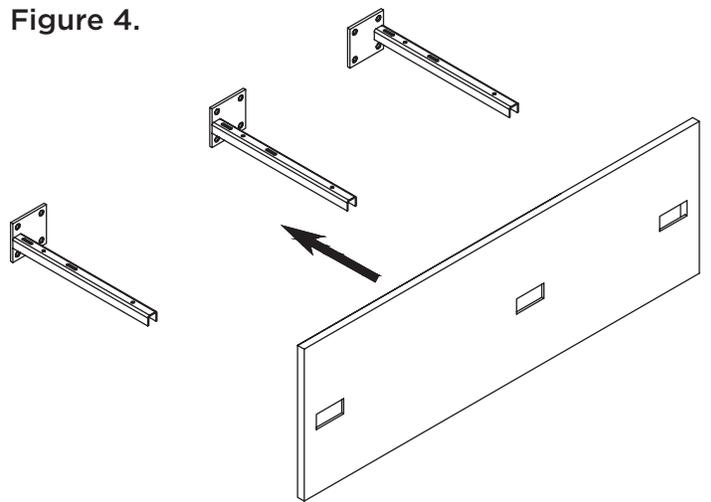

**Figure 5.**

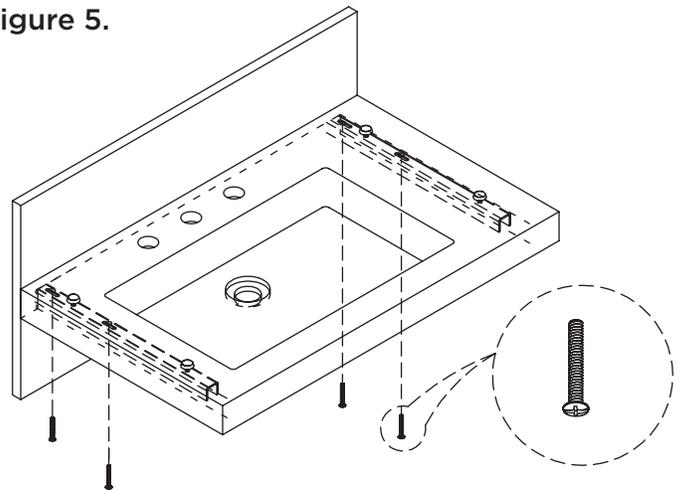

Model : E020731-8-CW  
E020747-8-CW  
E028015 towel bar

Designed By: DANELONMERONI | UK

**Step 6:** Slide the stone top onto the wall brackets and let it sit on the levelers.

See Figure 6.

**Step 7:** Fasten each bracket to the stone using the screws provided.

Be careful not to over-tighten as this can put unnecessary pressure on the stone.

See Figure 7.

Figure 6.


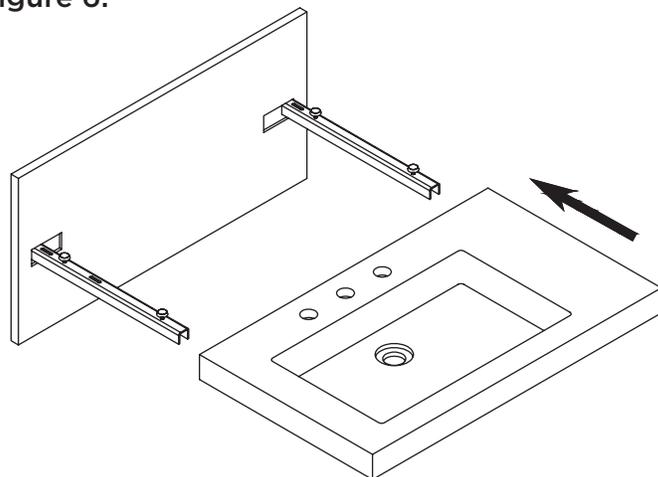


Figure 7.

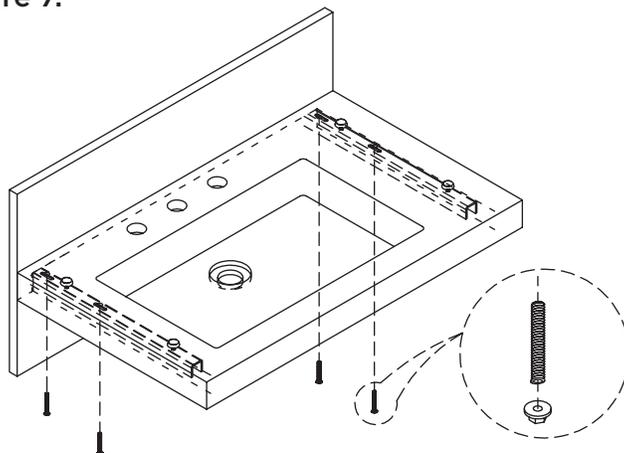

Model : E020731-8-CW  
E020747-8-CW  
E028015 towel bar


Designed By: DANELONMERONI | UK

## INSTALLING OPTIONAL TOWEL BAR

**Step 1:** Install the optional towel bar either on left or right under side with the 3 screws provided with towel bar (E028015-PC sold separately).

**See Figure 8.**

**Figure 8.**

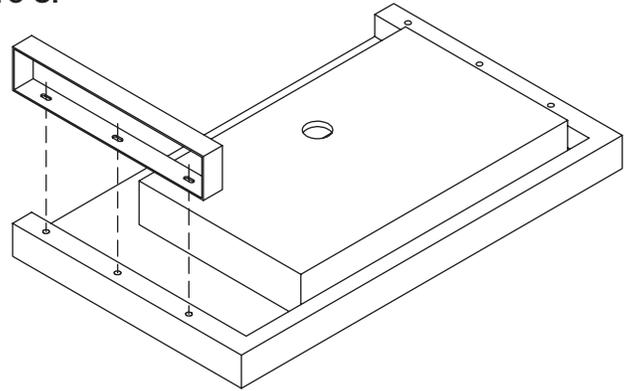

**Model :** E020731-8-CW  
E020747-8-CW  
E028015 towel bar

Designed By: DANELONMERONI | UK

## PRODUCT CARE AND MAINTENANCE

The fine furniture finish of your new vanity, mirror or other bathroom accessories are designed to protect against normal home use. With proper care, your product will provide years of use and beauty in your home.

### General Care Tips

- Install 2x8 backing material behind the finish wall to properly secure the vanity.
- Test cleaning product on small, discrete area prior to applying to entire surface.
- Wipe surfaces frequently with dry, soft, non-abrasive and lint-free towel.
- Do not allow liquids and moisture to accumulate on the surface of products.
- For warranty information, please visit our website at [www.ronbow.com](http://www.ronbow.com) or contact the Customer Service Department at (510) 713-1188.

### Natural Stone

- After installing your vanity top, it is mandatory that you clean and seal the top to make the surface more resistant to staining.
- Clean up any spills or liquids immediately. Never allow liquids of any kind to remain on the surface.
- Use a non-abrasive, damp cloth to wipe down surfaces.
- Use a gentle (pH balanced) detergent with warm water to clean the surface of your vanity top.
- DO NOT use any abrasive cleaning products that contain any of the following chemicals: trichloroethane or methylene chloride (such as paint removers or strippers), hydrofluoric acid, liquid bluing or gentian violet.

### Recommended Cleaning / Sealing Products

- SCI Clean Encounters Spray Cleaner
- Simple Green Stone Cleaner
- Profession's Choice - Miracle 511 H2O Plus Sealer
- SCI - Stone Spray-N-Seal

**DISCLAIMERS:** Effectiveness of cleaning your Ronbow products is dependent on various factors that include: water temperature, concentration and/or amounts of cleansers. Because of these many different conditions, Ronbow cannot guarantee that the above Product Care & Maintenance methods will effectively clean your product.

# RONBOW

40650 Encyclopedia Circle  
Fremont, CA 94538

T 510.713.1188  
F 510.657.9388

[ronbow.eu](http://ronbow.eu) | [ronbow.com](http://ronbow.com)