


# DAKOTA TIN

**INSTALLATION OPTION 1:** Hammer, Block of wood.

**HANDLING:** Metal edges are sharp! Cut resistant gloves required.

## INSTALLATION

1. Remove any shipping wrapping
2. Layout edging in desired area.
3. With one hand, hold edging upright. With the other hand, hold a block of wood (or a flat, thick object) directly on top of the garden edging. Tap the top of the block with a hammer (the wood block will act as a buffer to prevent damage to edging while installing) until garden edging is secured in the ground.
4. If using more than one panel of edging, use a drill to create holes at the top end and bottom end of each panel. Overlap the corrugate, and use screws to secure the two panels together.

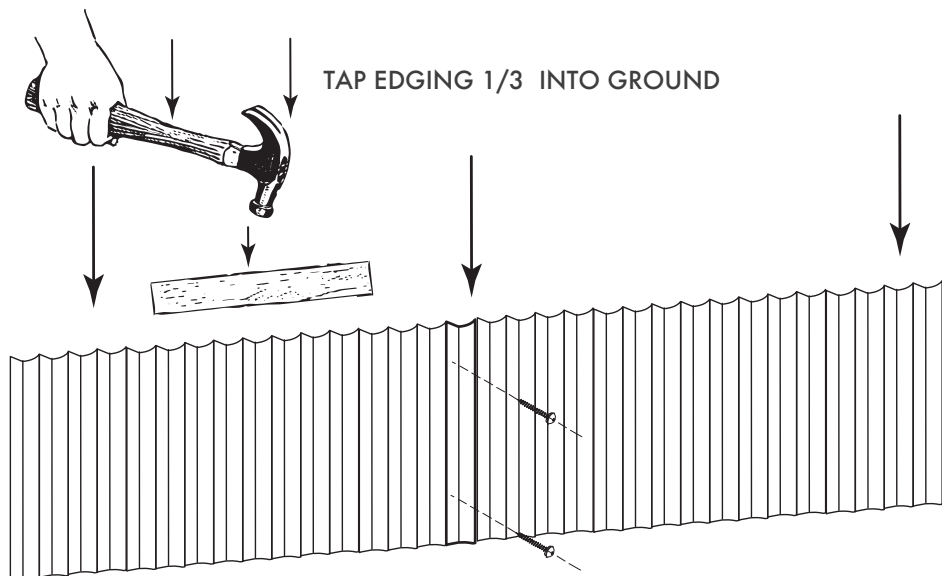

**INSTALLATION OPTION 2:** Reinforce with Wooden Stakes

Screw Gun, Wooden Garden Stakes

**HANDLING:** Metal edges are sharp! Cut resistant gloves required.

## INSTALLATION

1. Remove any shipping wrapping
2. Drive garden stakes into desired garden edging location.
3. Use self-drilling sheet metal screws. Use screw gun to screw edging to stakes.

