


1 Unpack

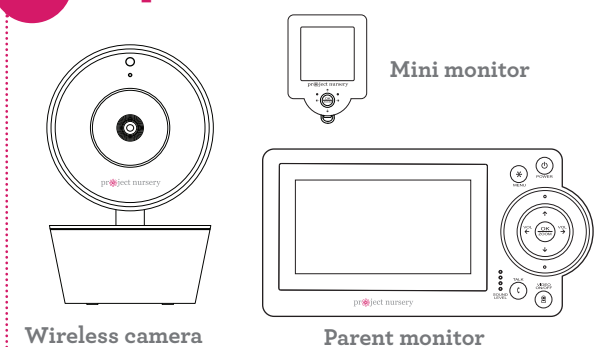

The accessories:

- (2) 10-foot charging cables
- (1) 3-foot charging cable (for the mini monitor)
- (1) dual power adapter (for the monitors)
- (1) single power adapter (for the camera)
- (1) wristband (1) lanyard
- (1) carabiner (1) clip


Note: Micro SD card included in model PNM5W01S.

Check out our setup videos

On your computer, go to ProjectNursery.com/Electronics or scan the QR code here.




2 Charge the monitors

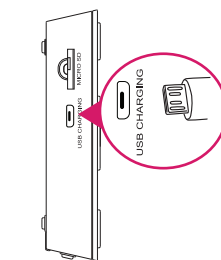


Find one of the long charging cables included in this package.

Plug one end of this cable into the **USB CHARGING** jack on the side of the parent monitor.

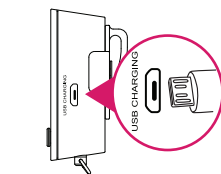

Find the short charging cable included in this package.


Plug one end of this cable into the **USB CHARGING** jack on the side of the mini monitor.

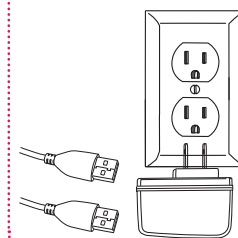

Plug the other ends of the charging cables into the double charging adapter. Then plug the adapter into an outlet or surge protector.

3 Position the camera

Find a location for the camera that gives you the best view of your baby in his or her crib.

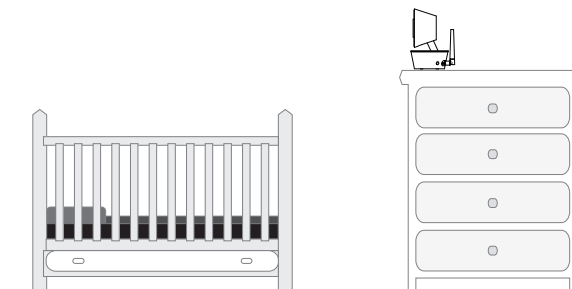

Place the camera on a flat surface, like a dresser or shelf, or mount the camera to a wall using the keyhole slots on its bottom.

IMPORTANT: NEVER place the camera or cords of any kind inside the crib. NEVER place the camera or cords within reach of the baby. They should be at least 3 feet away.




WARNING


Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

4 Plug in the camera

Find the other long charging cable included in this package.

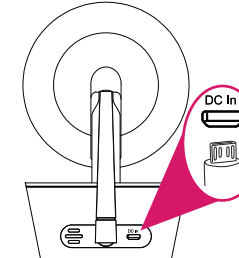

Plug one end into the **DC In** jack on the back of the camera.

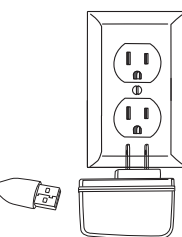

Plug the other end into the single charging adapter. Then plug the adapter into an outlet or surge protector.

The camera turns on automatically when it's plugged in (the indicator light on the base below the camera lens turns blue).

5 Turn everything on



Press and hold the **POWER** button on the parent monitor to turn it on.



Press and hold the **POWER** button on the top of the mini monitor to turn it on.

Congratulations!

Your system is ready to use! The camera comes pre-paired with your parent and mini monitors. However, it's a good idea to go ahead and set the time on both your parent and mini monitors now, before you start using them.


For information on how to use your new system, see the owner's manual or the other side of this quick start guide.

IMPORTANT!


To keep this baby monitoring system as secure as possible, only one monitor can view video at a time. If you want to use the mini monitor, for example, make sure you power the parent monitor off (and vice-versa).

6 Set the date and time on the parent monitor


1 Press the **MENU** button on the parent monitor. The menu appears on screen.

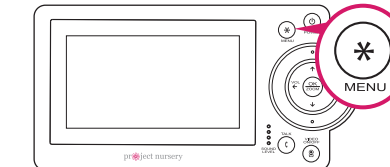


2 Use the arrows to highlight SETTINGS. Press **OK/ZOOM** to select it. The Settings menu appears on screen.

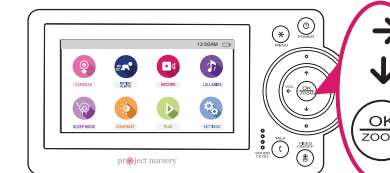

3 Press the down arrow to highlight Time Set. Press **OK/ZOOM** to select it.

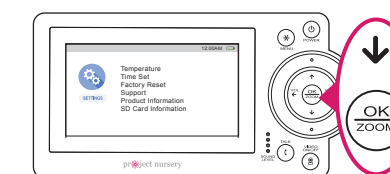


4 Use the up/down arrow buttons to set the month, day, and year.

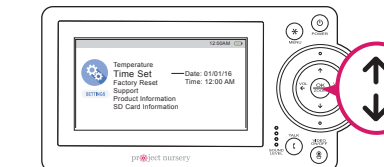


5 After setting the year, press the right arrow to adjust the time.

Use the up/down arrows to set the hours, minutes, and AM/PM. Press **OK/ZOOM** when you're finished.

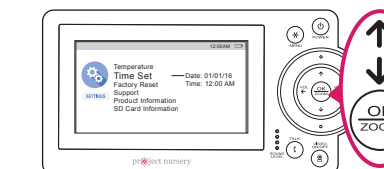

7 Set the date and time on the mini monitor

1 Press the **MENU** button on the top of the mini-monitor. The menu appears on screen.

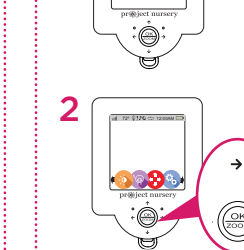

2 Move the joystick on the front of the mini-monitor to the right to highlight the **SETTINGS** icon. Press **OK/ZOOM** to select it. The Settings menu appears.




3 Move the joystick down to highlight Time Set. Press **OK/ZOOM** to select it.



4 Use the up/down joystick to set the month, day, and year.

After setting the year, press the right joystick to adjust the time. Use the up/down joystick to set the hours, minutes, and AM/PM. Press **OK/ZOOM** when you're finished.

Tour of System: Parent Monitor

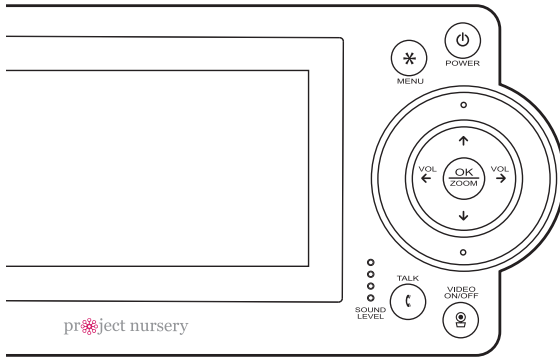


Watching baby

You can turn the display on and off without turning the monitor off. You'll still hear your baby, but the display will be asleep until you awaken it.


To turn the display on or off: Press the **VIDEO ON/OFF** button on the parent monitor.

IMPORTANT: To see video on the parent monitor, make sure the mini monitor is powered off.

 **MENU** accesses the system's menu screens. See the user's manual for more information.


 **POWER** turns the monitor on and off (press and hold).


VOL ← and → **VOL** turn the volume down/up. In menu screens, these navigate left/right.


 **OK/ZOOM** zooms the camera in/out. Press and hold to start pan/tilt of the camera, then use the arrows to pan and tilt.

↑ and ↓ navigate up/down in menu screens.

SOUND LEVEL indicators show you the level of sound from your baby's room.

 **TALK** lets you talk through the camera's speaker. Press and hold while talking.

 **VIDEO ON/OFF** turns the screen on and off. Press and hold to switch cameras if you have more than one paired to this monitor.

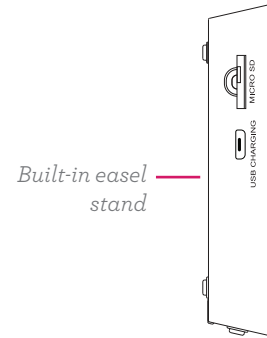

Parent monitor side and back panels

MICRO SD slot holds the memory card (included in model PNM5W01S; not included with other models) for video or still image recording. See the User Guide for information on making videos or taking pictures of your baby.

USB CHARGING jack plugs into your charging cable to recharge or power the parent monitor.

Built-in easel stand lets you stand the unit on a flat surface.

Pan, Tilt, and Zoom

To zoom the active camera: Press the **OK/ZOOM** button on the parent monitor.

To pan or tilt the active camera: Press and hold the **OK/ZOOM** button until the pan/tilt arrows appear on the screen. Then use the arrow buttons to pan and tilt the camera.

Talking to baby

To talk through the speaker on the active camera: Press and hold the **TALK** button on the parent monitor.

Talk normally to the parent monitor while you're pressing the **TALK** button—your voice will come out on the camera's speaker.


Release the **TALK** button when you're done talking.

Listening to baby

The **SOUND LEVEL** indicators on the parent monitor show you at a glance the sound level in your baby's room, regardless of how loud the audio is on the parent monitor.

To increase or decrease the volume of the audio monitor: Press the **VOL+** or **VOL-** buttons on the parent monitor.

Tour of System: Mini-Monitor

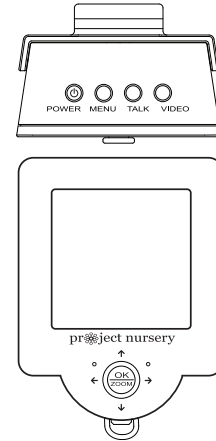

To turn the display on or off: Press the **VIDEO** button on the mini monitor.

IMPORTANT: To see video on the mini monitor, make sure the parent monitor is powered off.

Questions?

Just call 1-844-393-7338 or visit ProjectNursery.com

POWER turns the mini-monitor on and off (press and hold).

MENU accesses the system's menu screens. See page 13 of the user's manual for more information.

TALK lets you talk through the camera's speaker. Press and hold while talking.

VIDEO turns the screen on and off. Press and hold to switch cameras if you have more than one paired to this monitor.

Left/Right arrows turn the volume down/up. In menu screens, these navigate left/right.

OK/ZOOM zooms the camera in/out. Press and hold to start pan/tilt of the camera, then use the arrows to pan and tilt.

Up/Down arrows navigate up/down in menu screens.

USB CHARGING jack (right side) plugs into your charging cable to recharge or power the mini-monitor.

To zoom the active camera: Press the **OK/ZOOM** button on the mini monitor.

To pan or tilt the active camera: Press and hold the **OK/ZOOM** button until the pan/tilt arrows appear on the screen. Use the arrow buttons to pan and tilt the camera.

To talk through the speaker on the active camera: Press and hold the **TALK** button on the mini monitor, then speak normally while you're pressing the **TALK** button.

Release the **TALK** button when you're done talking.

Up and Running In Just a Few Baby Steps...

Want more info on the system

See the user's manual or visit www.ProjectNursery.com.