

## MED0374GD | Bromic MediFridge™ Display Chiller 374L



Audible Alarm sounds if the temperature of the unit falls or rises outside the set Min/Max recording

Integrated lock keeps medicines secure

Fan forced to keep even temperature cooling throughout the unit

Door open alarm

LED Light maximises product visibility




Fan and evaporator protection cover prevents product from being damaged

Double glazed safety glass increases energy efficiency

Rollers for easy placement

PVC coated elevated bottom shelf for consistent temperature airflow

Adjustable legs for levelling

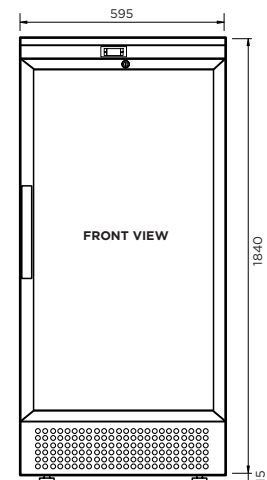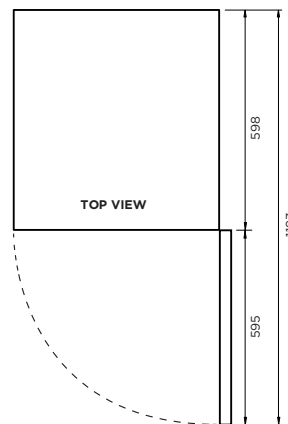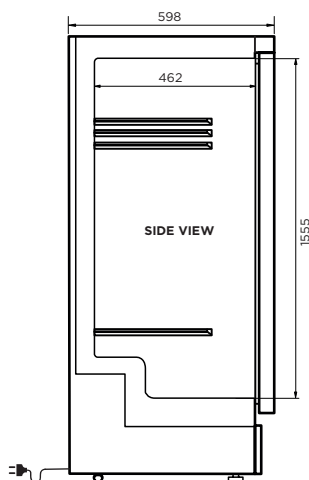

### FEATURES

Integrated temperature Alarm System ensures sensitive stock is maintained and managed according to requirements

Fan Forced air circulation ensures even temperature throughout the unit

Increased air circulation around the unit thanks to unique custom wire 'open rung' shelves at the top and bottom to prevent overstocking

Consistent air circulation throughout the unit ensures mandated temperatures of 2°C to 8°C

Backed by Bromic national services & warranty

### DIMENSIONS

	External (mm)	Internal (mm)
Width	595	505
Depth	598	462
Height	1840	1555

## MED0374GD | Bromic MediFridge™ Display Chiller 374L

**SPECIFICATIONS**

Part Number	3736218	External (mm)	Internal (mm)
Capacity	372L	Width	595 505
Weight	81kg	Depth	598 462
Air Circulation	Fan-Forced	Height	1840 1555
Climate Class	4		
Temperature	Range	+2°C to 8°C	
	Min/Max Temp Recorder	Yes	
	Display	Digital	
Exterior	Material	Powder Coated Sheet Metal	
	Solid or Glass	Low-E Glass + Argon Gas	
Door	Shape	Flat	
	Self-Closing	Yes	
	Door Lock	Yes	
	Door Switch	Yes	
	Door Swing Dimension	595mm	
	Total Depth of Door Open	1193mm	
	Shelves	No. of Shelves	6 (5 full size, 1 floor shelf)
Style of Shelves		Open rung shelf	
Shelves Dimensions		500 x 400mm	
Adjustable		Yes	
Capacity		20kg	
Electrical	Voltage	240V	
	Frequency	50Hz	
	Input Power	350W	
	Current	2.7A	
	Power Consumption	2.37kWh/24hr	
Compressor	Refrigerant	R134a	
	Charge	200g	
Alarms	Temperature	Yes	
	Audible	Yes	
Internal Lighting	LED Internal Light	Yes	
Defrost	Manual/Automatic	Automatic	
	Type of Defrost System	OFF Cycle	
Plug	Type	3-pin AU plug	
	Rated Current	10A	
	Plug Location	Rear, bottom left	
Insulation Type	Cyclopentane		
Feet/Wheels	2 rollers at rear, 2 feet at front		
Approvals	Quality Care Pharmacy Program Compliance - Cold Chain Testing (QCPP), MEPS, The Pharmacy Guild of Australia		
Warranty	2 year warranty		
Data Logger	Available, part #350700050		